

Able Assist Adjustable Transfer Aid

Instructions for use of the Able Assist Adjustable Transfer Aid

Able Assist Adjustable Transfer Aid Table Specifications

Table specifications and dimensions

Table specifications and dimensions (continued)

Table specifications and dimensions (continued)

Table specifications and dimensions (continued) Able Assist

Table specifications and dimensions (continued)

Assembly instructions:

1. Remove the packaging and inspect the Able Assist transfer aid.
2. Lay the transfer aid on a flat, clean surface.
3. Adjust the table height to the desired level.
4. Adjust the table width to the desired level.
5. Adjust the table depth to the desired level.
6. Lock the table in place.
7. The transfer aid is now ready for use.
8. Store the transfer aid in a safe, dry place.

Specification	Value
Table Height	33.5"
Table Weight	200"
Table Dimensions	35.8" * 25.2" * 4.2"
Table Depth	16.5" - 31.5"
Table Width	Adjustable
Table Length	Adjustable

Assembly instructions:



Able Assist Transfer Aid

